



Our retail price is a recommendation only. Prices in offer may differ. All prices indicated 0,00 € will follow in the offer.

ROTHENBERGER CORDLESS PRESSING TOOL ROMAX 4000 BASIC SET 12 - 110 MM,4 AH + 2 AH WITH RECHARGEABLE BATTERY AND CHARGER

SKU: 4004625427262



1,00 ST Cordless pressing tool ROMAX 4000
Basic Set 12 - 110 mm,4 Ah + 2 Ah with
rechargeable battery and charger

Categories: [Pressing tools and accessories,](#)
[Sanitary tools](#)

Product Features: Battery voltage: 18 V
Battery capacity: 4 Ah + 2 Ah
Type: With rechargeable battery and charger
Height: 79 mm
Brand: ROTHENBERGER

Scope of delivery:
1,00 ST Cordless pressing tool ROMAX 4000
Basic Set 12 - 110 mm,4 Ah + 2 Ah with
rechargeable battery and charger |

PRODUCT DESCRIPTION

Electro-hydraulic cordless pressing machine for system-dependent pressing of fittings of Ø 12-110 mm

- With 32 kN
- 18 V 4 AhH
- Increased power capacity due to improved rechargeable battery technology
- Increased service interval after 40000 presses / 2 years
- Pressing operation last for approximately 5 seconds
- Extremely light weight
- In the clickable ROCASE plastic case Further technical information:
- Length: 450mm
- Weight: 3.6without pressing jawskg
- Work area: 12-110mm
- Subject to audit: Yes Scope of supply: Rechargeable lithium-ion battery, high-speed charger (Basic equipment ROMAX 4000, 1x 4 Ah rechargeable battery, 1x 2 Ah rechargeable battery, EU charger, operating instructions, ROCASE with insert for ROMAX 4000) Note on the disposal of batteries and rechargeable batteries As we sell batteries and rechargeable batteries and devices that contain batteries



and rechargeable batteries, under the German Battery Act (BattG) we are obliged to draw your attention to the following: The symbol of the waste bin with the X through it on batteries and rechargeable batteries means that they must not be disposed of in household waste after consumption. If batteries or rechargeable batteries contain mercury, cadmium or lead, you will find the chemical symbol (Hg, Cd or Pb) under the symbol of the waste bin with the X through it. Every user of batteries or rechargeable batteries is legally obliged to return old batteries and rechargeable batteries. They can be returned, free of charge, to the retailer or another collection point near you. You can obtain the addresses of suitable collection points near you from your local government authority. In the case of batteries that contain more than 0.0005 percent by mass mercury, more than 0.002 percent by mass cadmium or more than 0.004 percent by mass lead, the chemical symbols of the respective harmful substance used are indicated under the waste bin symbol. The chemical symbols have the following meaning: Pb: Battery contains lead Cd: Battery contains cadmium Hg: Battery contains mercury

PRODUCT DATASHEET LEGAL NOTE

Please note that the information on this datasheet is provided without warranty and is intended only as non-binding information about the product. Any liability for damages or losses that may arise from the use of this information is excluded. We therefore recommend that you verify the information on this datasheet with other sources before making any decisions based on this information. Additional information about the product can be found on our website.